


User Instructions

LCD Display

Controller Guide

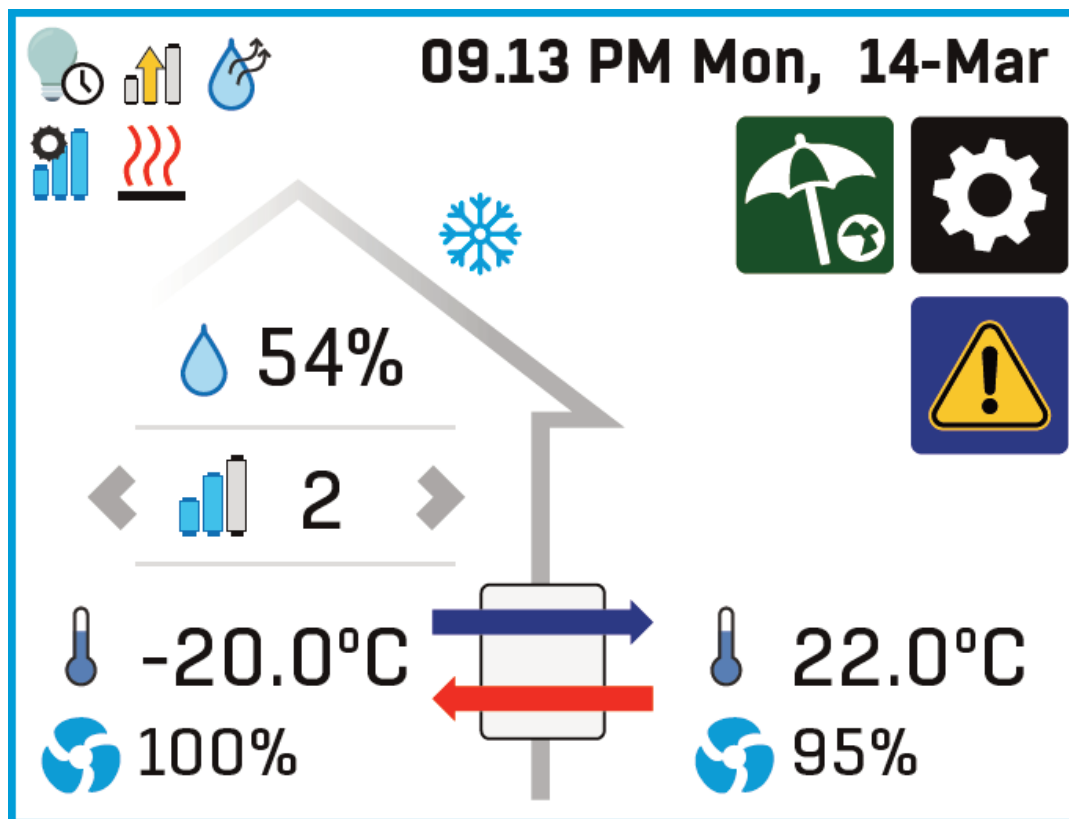


NOTE: you will only be able to carry out the operations shown in this manual if you have a Vectaire MVHR with an integral LCD screen or a Vectaire LCD Commissioning Kit

User Instructions

LCD Instructions

Main Screen Display

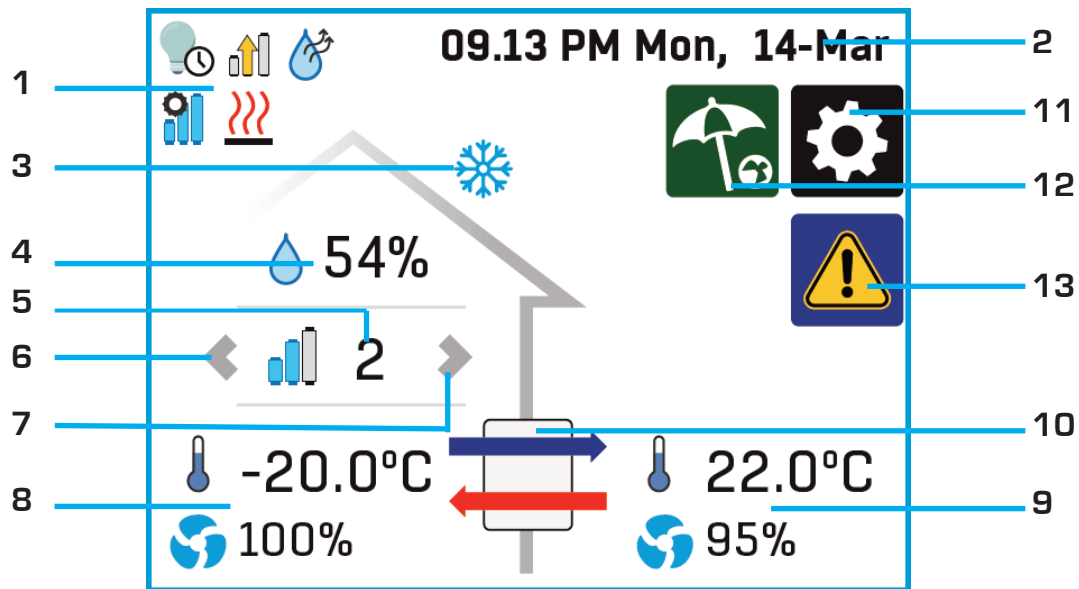

1. Status Icons Area

Icons appear only when the related function is active:

-  Boost speed time delay operating
-  Boost speed on
-  Boost speed over-run timer operating
-  Boost speed activated by remote input (if fitted)
-  Purge speed activated by remote input (if fitted)
-  Humidity control in operation (if fitted)
-  Night time inhibitor operating
-  Pre-heater on (if fitted)
-  Home automation system active (if fitted)
-  CO₂ control in operation (if fitted)

2. Time and Date.

3. Frost Protection operating.

4. Relative Humidity Level. If the R.H is too low (dry climate), or if this system is not fitted '.....%' is shown.

5. Operating speed selected by user - 1 = trickle, 2 = boost, 3 - purge.

6. Touch button to decrease operating speed.

7. Touch button to increase operating speed.

8. Inside temperature [°C]/exhaust motor speed [%].

9. Outside temperature [°C]/intake motor speed [%]

10. Energy exchanger status.

 Energy exchanger is active

 Bypass is active (if fitted)

 Intake motor off

11. Touch to open 'Options' menu. (See below for user enabled controls).


12. Indicates 'Holiday Mode' is operating. This means that the ventilation system has been set to minimum running, saving energy whilst maintaining good air quality (the level of operation is factory set).

13. Touch to review errors list. Hidden when no error is detected.

User Instructions

LCD Instructions

Options Screen

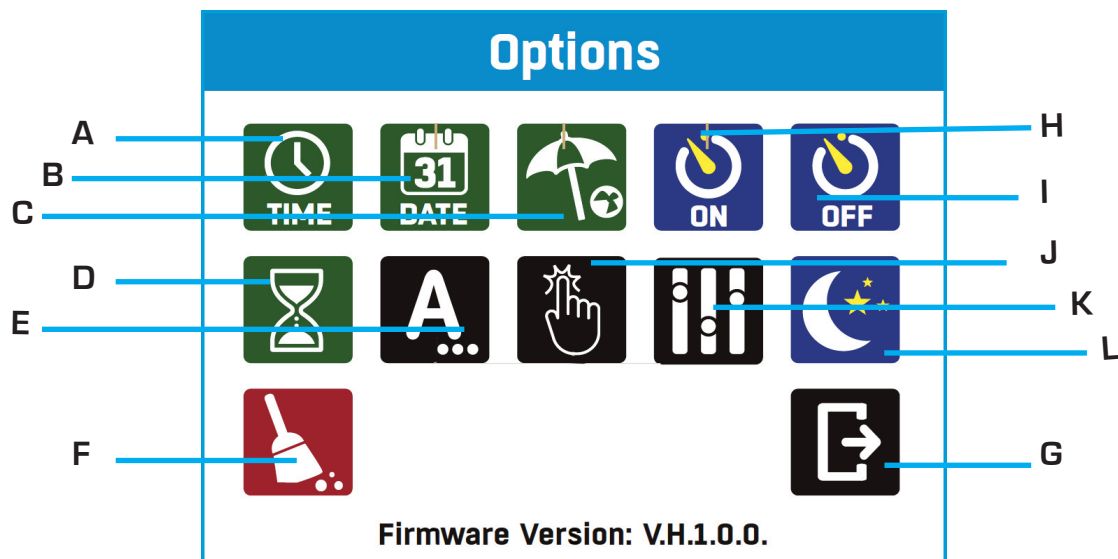

TOUCH SCREEN TO OPEN

- A. Setting Time: touch time settings button to set up format (24hr or 12hr), DST (daylight saving time) and time zone.
- B. Setting Date: touch date settings button to set date format.
- C. Holiday mode icon - touch to activate 'Holiday Mode'. This will set the ventilation system to minimum running saving energy whilst retaining good air quality (the level of operation is factory set)
- D. When the filters have been cleaned or changed tap this symbol. Then tap the  button to reset the filter saturation counter to 0%.
- E. Language selection screen - ENGLISH, GERMAN, FRENCH, SPANISH, MANDARIN
- F. Screen cleaning utility: Wipe your touch screen safely without wiping out your settings.

H, I, J, K and L.. These options are not accessible for user operation

- G.. Exit to main screen.

User Instructions

LCD Instructions

Trouble Shooting

Occasionally the  symbol will appear on the main screen display. This indicates that something requires attention. Tapping on the symbol will display the message (if there are several messages, tapping 'HIDE' will display the next message).

Apart from the filters, there are no user serviceable components. All technical issues must be reported to your installer or service agent.

Below are the messages that either require user action or are for information purposes.

**Maintenance notice**

Please clean the filters.

Hide

When this notice appears, the integral filters need to be checked and cleaned or replaced if necessary. See the 'Filter Replacement' section in the product user guide.

After changing or cleaning the filter, go to 'OPTIONS SCREEN' (page 3) of this guide, section 'G' to reset the filter counter.

**Maintenance notice**

**System date/time inaccurate.
Please adjust clock.**

Hide

Please correct the time/date using the options symbol from the main display screen.

**Warning !**

**You entered an
incorrect passcode.**

Hide

If an incorrect passcode is entered five times consecutively, the system will automatically lock for one hour.